

*Improve business efficiency • Improve employee workplace safety • Improve patient care & management*

All computing Work Stations keep patient information concealed and computers secure.  
Our cost-effective innovative designs are user friendly, durable and ergonomically efficient.


---




### **Security Laptop Stand - #350306**

The Omnimed Security Laptop Stand is constructed of heavy gauge steel that is powder coated for a durable attractive finish. The laptop is secured to the work surface with a cover that has two-lock security and an adjustable keyboard tray underneath. The security top is mounted on a heavy gauge plated steel pole in a 5 leg base with 3 inch casters. The stand can be used sitting or standing. Vertical movement is controlled by operating the hand levers on both sides of the security top to adjust the height from 31 to 41 inches. A gas spring lift mechanism within the unit provides the smooth vertical lift. Stands measure 31-41 inches high by 21½ inches wide and 14 ½ inches deep. Its base has a diameter of 25 inches. These units include a 5 year warranty.

- Accommodates laptops up to 15½" Wide
- Optional Scanner Holder
- Durable powder coated steel construction
- Two lock security for laptop
- Sturdy 5 leg base on 3 inch casters
- Measures 31" to 41"H by 18" W by 12"D
- 5 Year Warranty

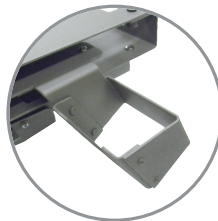


**Scanner Holder**  
**#350306S**

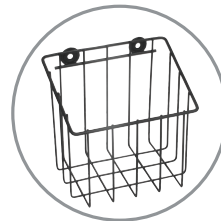

**Wire Basket**  
6½H x 4¼W x 4¼D  
**#350005**



**Transport Basket**  
10H x 13W x 4D  
**#350002**

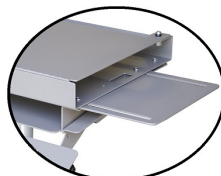

**Ambi Mouse Tray**  
**#350306MT**